


攪拌機零配件圖

CE-220X/224X 20Lt/24Lt Mixer

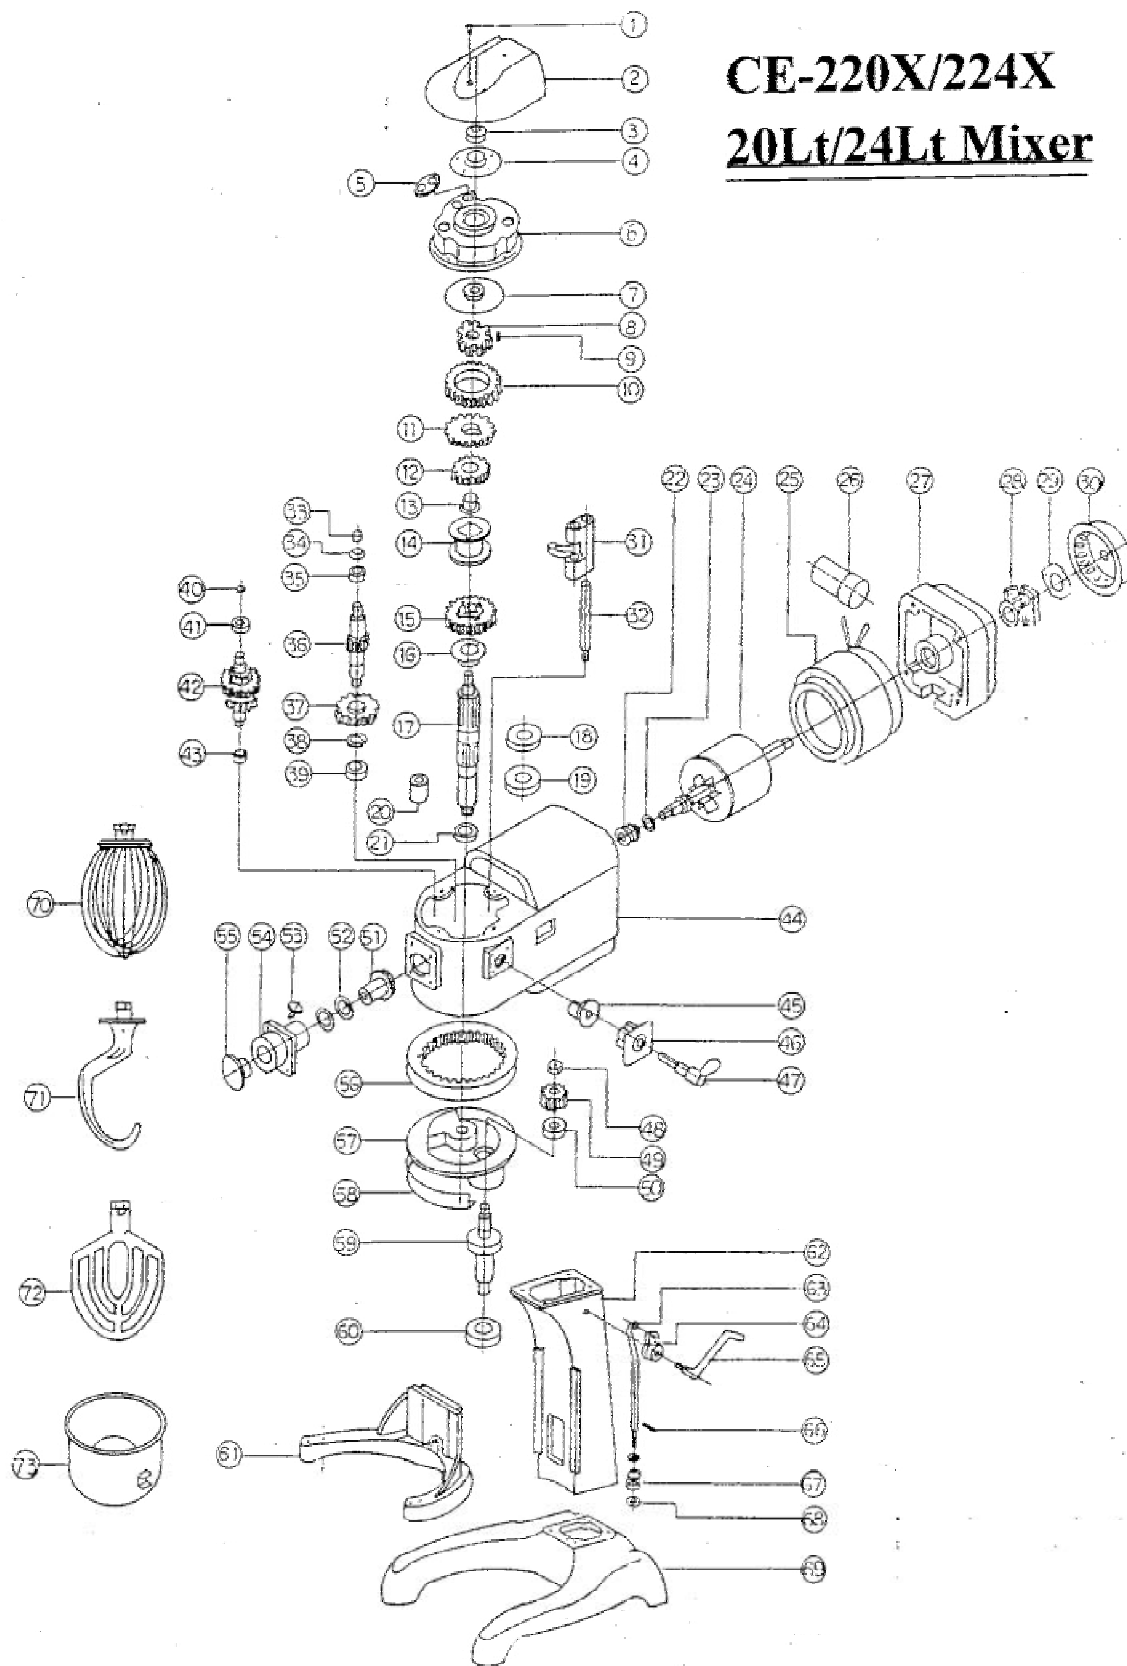

攪拌機零配件圖

Parts List for CE-220X/224X 20Lt/24Lt Mixer					
No.	Description		No.	Description	
1	螺絲	Screw	41	墊圈	Nut
2	上蓋	Top Cover	42	三連齒輪	Three Level Gear
3	雷姆	Stop Nut	43	軸承	Bearing 6201
4	軸承蓋	Bearing Cap	44	機頭	Head Case
5	軸承	Retainer-twin bearing	45	偏心塊	Cam
6	內蓋	Inner Cover	46	轉速指示板	Plate
7	套管(上)	Spacer-upper	47	變速把手	Handle
8	10溝齒輪	Gear	48	扣環	Special Nut
9	鋼珠	Steel Ball	49	內齒輪	Pinion
10	1速齒輪	1st Speed Gear	50	軸承	Ball Bearing 6204
11	傘齒輪	Umbrella Gear	51	被動傘齒	Driven Gear
12	3速齒輪	3rd Speed Gear	52	墊圈	Washer
13	鋼套	Bearing-clutch gear	53	固定螺絲	Thumb Screw
14	離合器	Clutch	54	碎肉用承座	Hub
15	2速齒輪	2nd Speed Gear	55	前蓋	Plug
16	扣環	Spacer-lower	56	內齒輪	Ring Gear
17	主軸心	Shaft-center	57	偏心輪	Planetary
18	油封	Oil Sealer	58	裝飾圈	Drip Cup
19	軸承	Bearing 6205	59	攪拌軸	Mixing Shaft
20	墊圈	Spacer-bearing	60	軸承	Bearing 6204
21	雷姆	Stop Nut	61	掘手	Bowl Support
22	空心螺桿	Worm	62	主體	Pedestal
23	墊圈	Spring	63	連動桿	Lift Rod
24	馬達心	Motor Shaft	64	傳動片	Lift Arm
25	馬達	Motor Coil	65	昇降把手	Lift Handle
26	電容器	Capacitor	66	雷姆	Cotter Pin
27	後蓋	Case	67	彈簧	Spring
28	啟動開關	Motor Starter	68	雷姆	Stop Nut
29	啟動片	Spacer-motor starter	69	底座	Base
30	馬達蓋	Motor Case	70	攪拌球	Wire Whipper
31	調速塊	Yoke	71	攪拌鉤	Hook
32	調速塊心	Rod	72	攪拌槳	Beater
33	軸承	Bearing 6201	73	攪拌桶	Bowl
34	墊圈	Nut			
35	墊圈	Washer			
36	齒輪心	Shaft-worm gear			
37	斜齒輪	Worm Gear			
38	墊圈	Retaining Ring			
39	軸承	Ball Bearing 6201			
40	軸承	Ball Bearing 6201			